

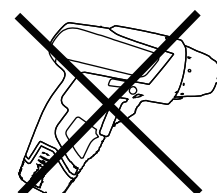


ASSEMBLE INSTRUCTION

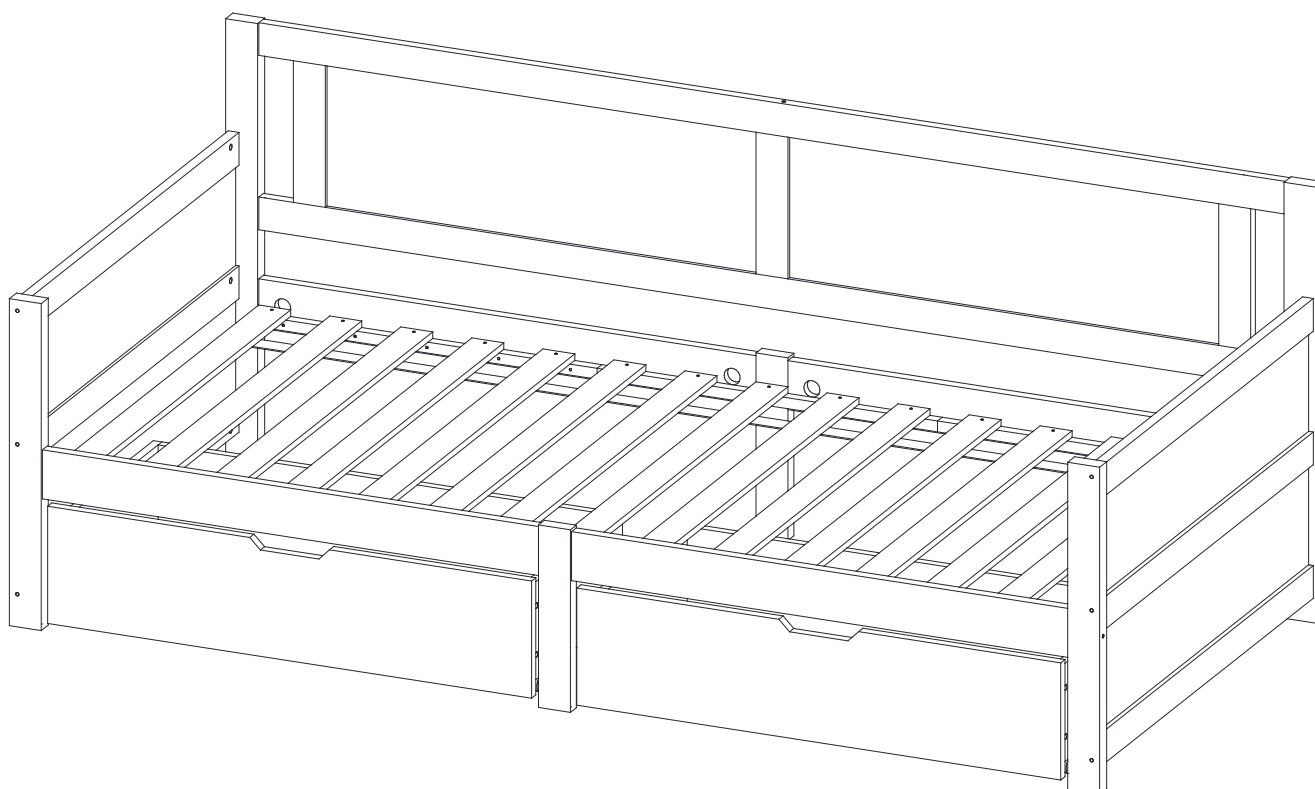

A.x8  M6x100mm	B.x12  M6x70mm	C.x12  	D.x12  	E.x16  Φ10x13mm	F.x68  Φ4x30mm	G.x46  Φ8x30mm	H.x2  Φ6x100mm
I.x4  M4	J.x1  	K.x2  	L.x8  	M.x2  M6x140mm	N.x8  	O.x8  	P.x16  Φ3.5x16mm




PART LIST

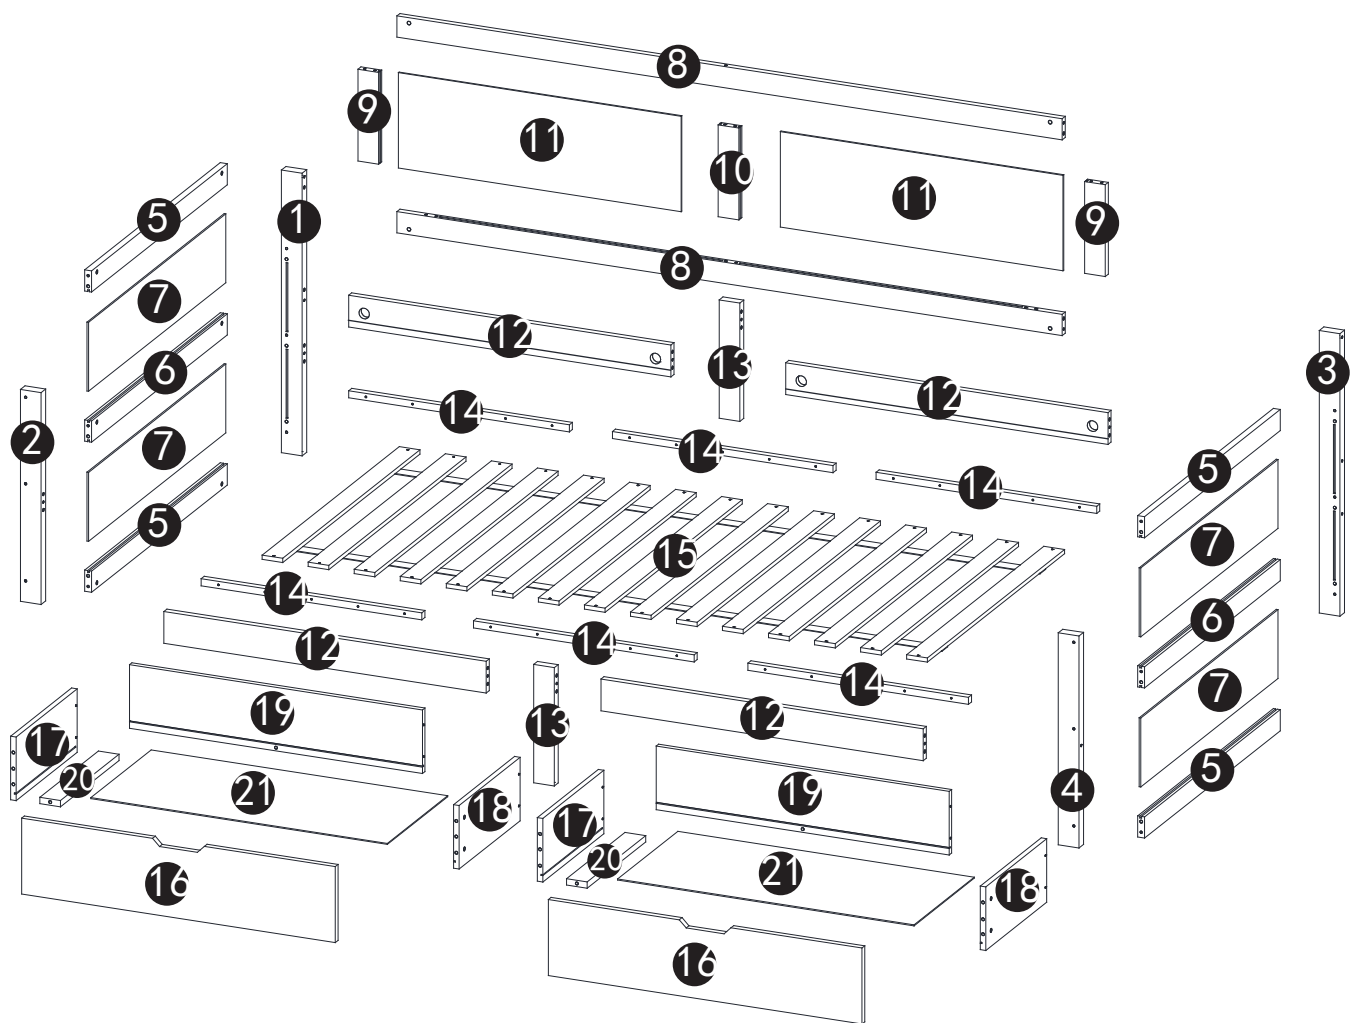

Carton 1	1 2 3 4 5 6 8 9 10 12 13 14 A.B.C.D.E.F.G.H.I.J.K.L.M.N.O.P
Carton 2	7 11 15 16 17 18 19 20 21


01

B		6
E		6
G		6
I		1

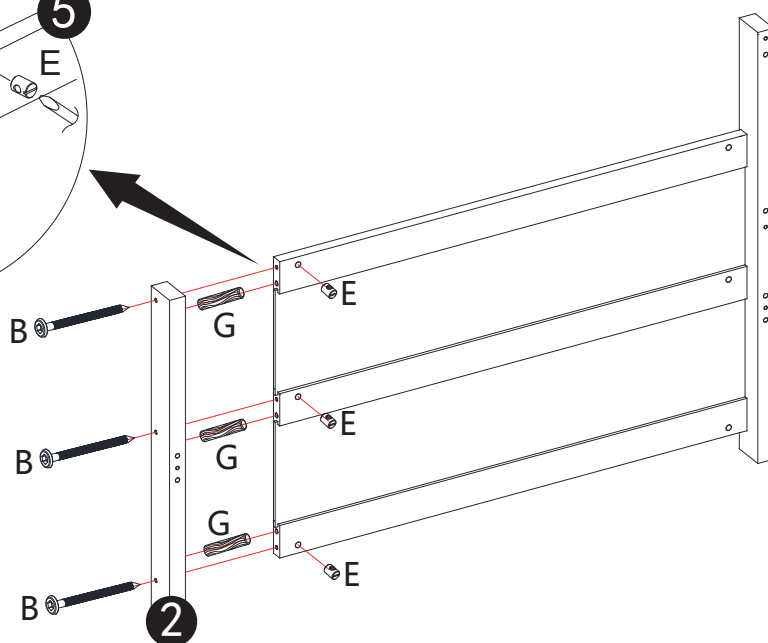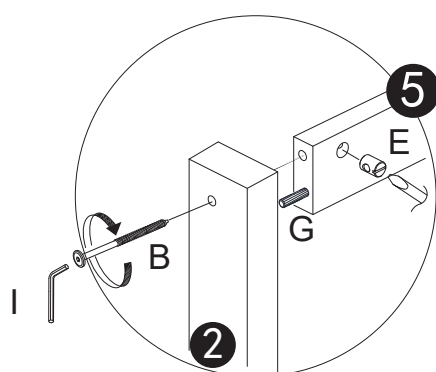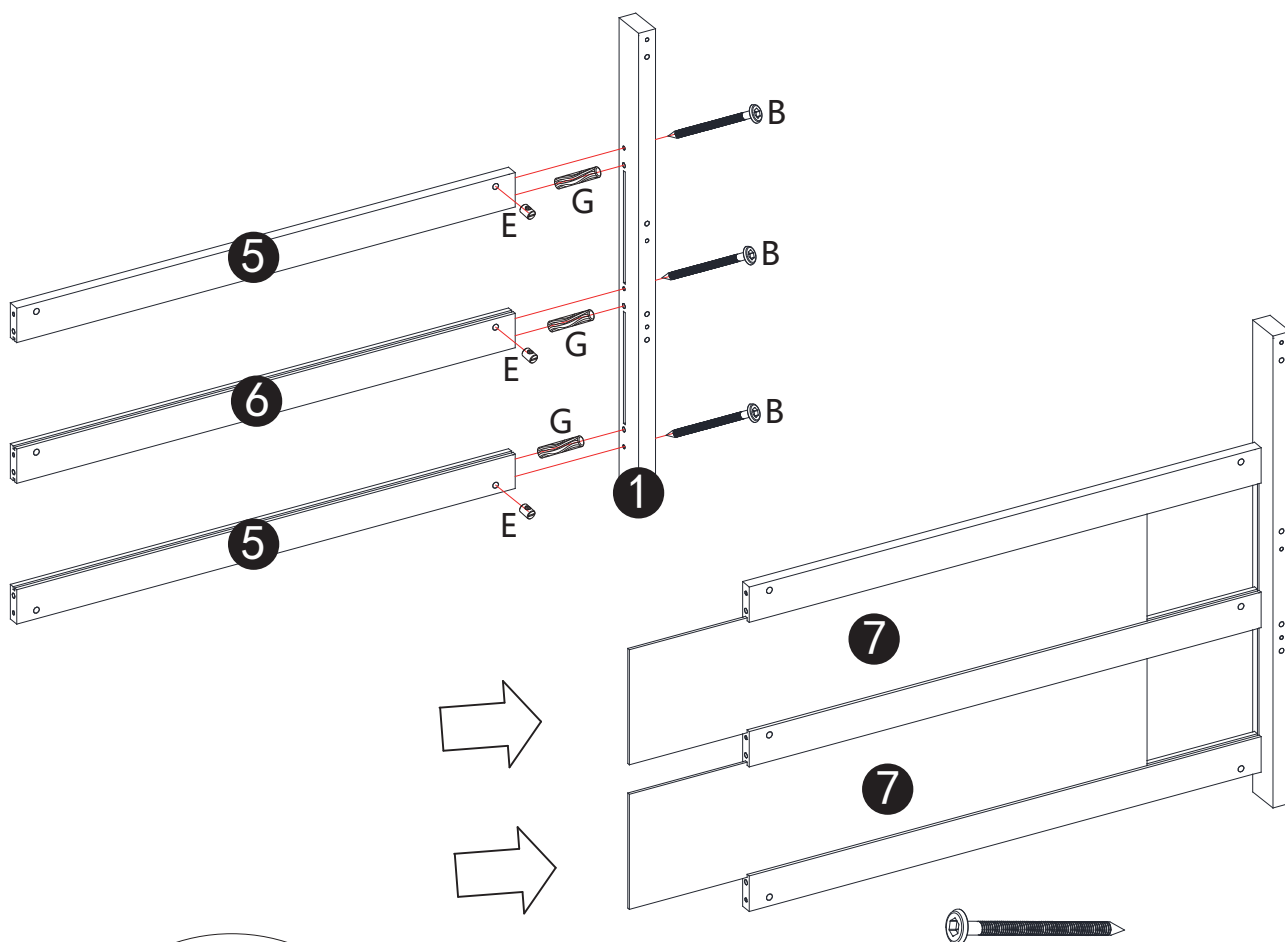




02

B		6
E		6
G		6
I		1

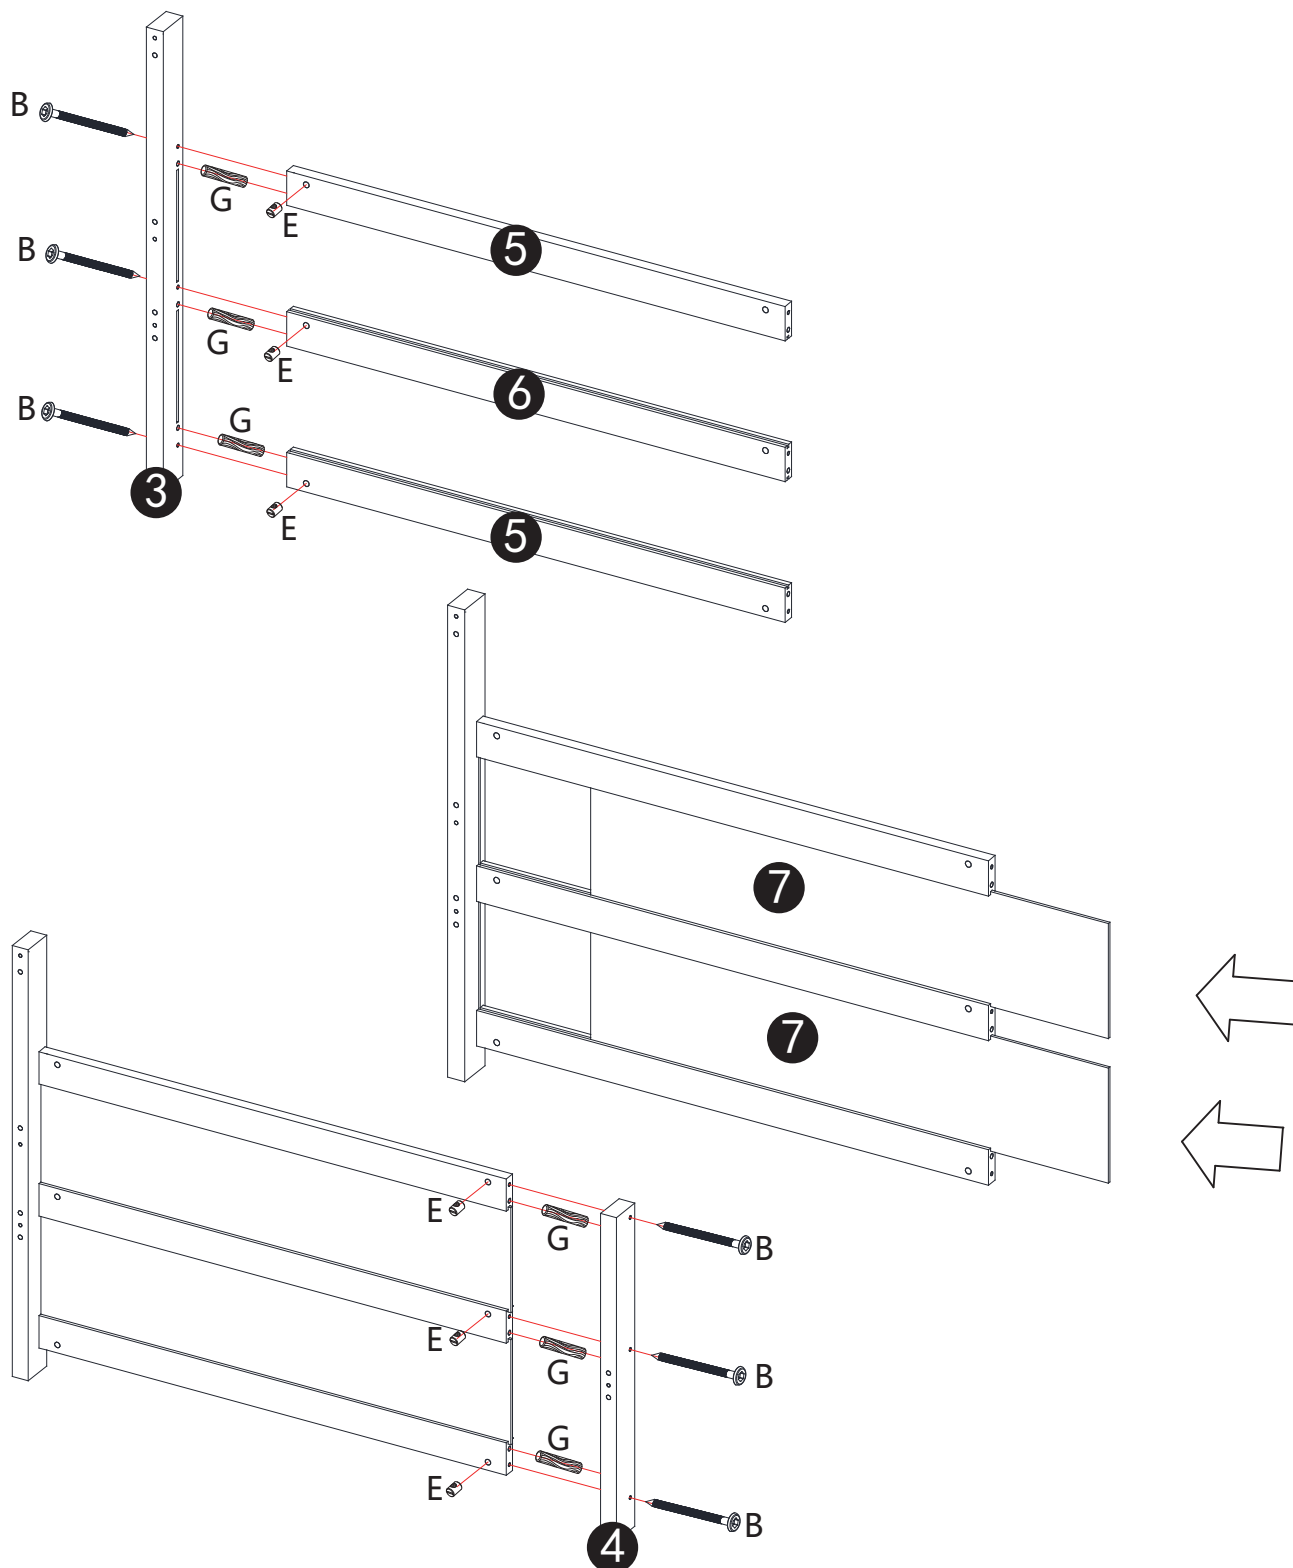




03

G		10
H		2
I		1

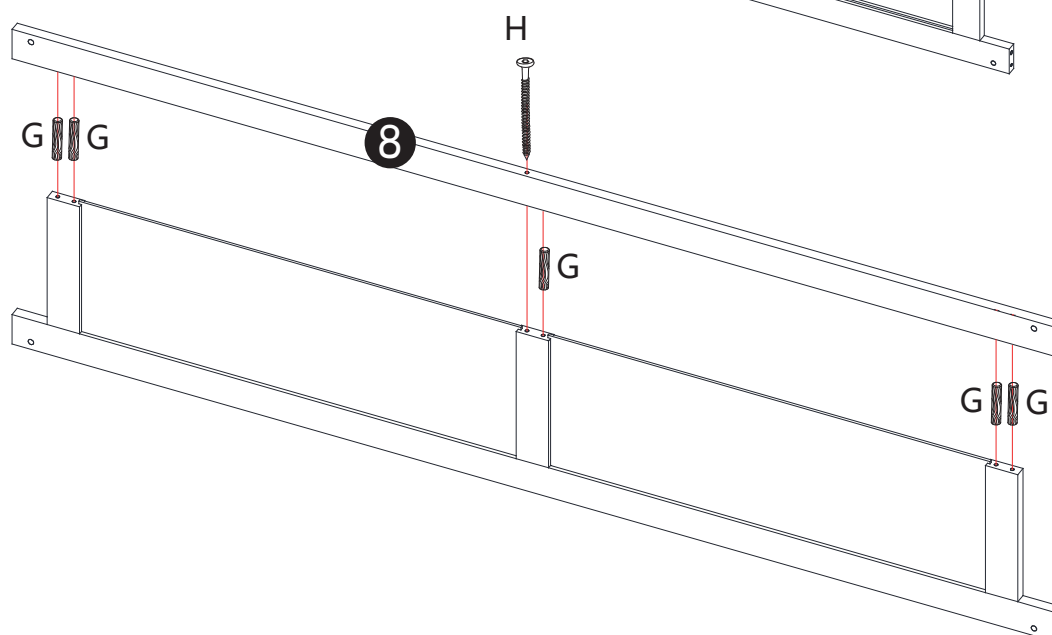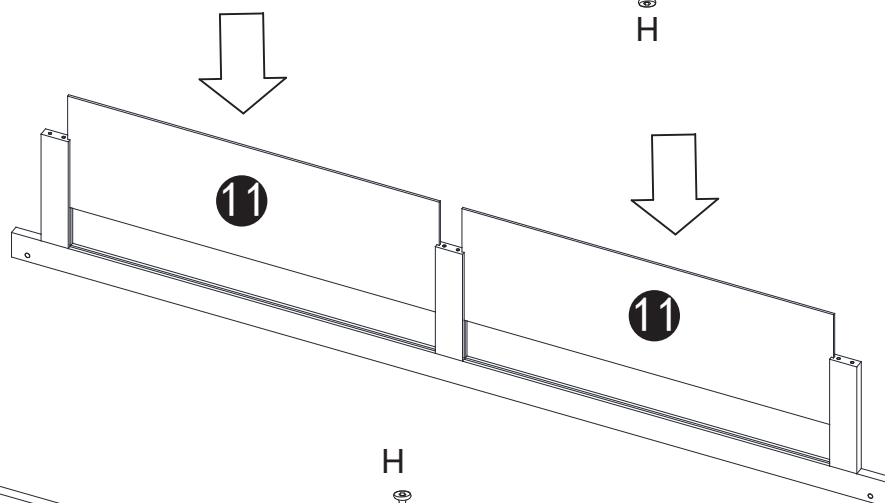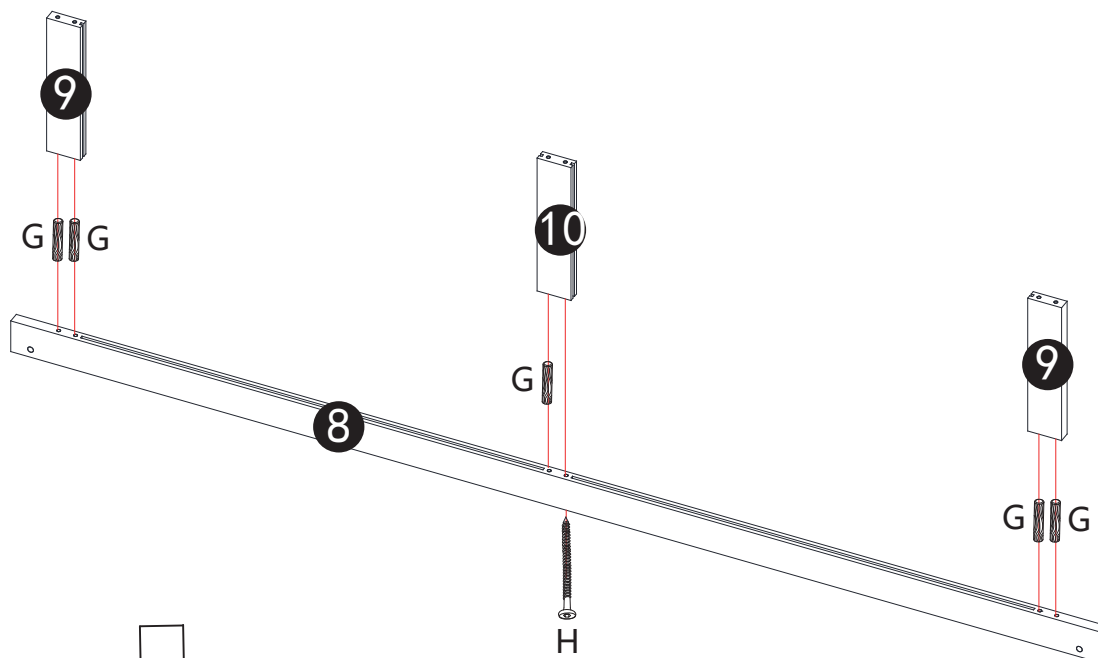


04

G		8	F		30
N		4	K		2
M		2	J		1
O		4			

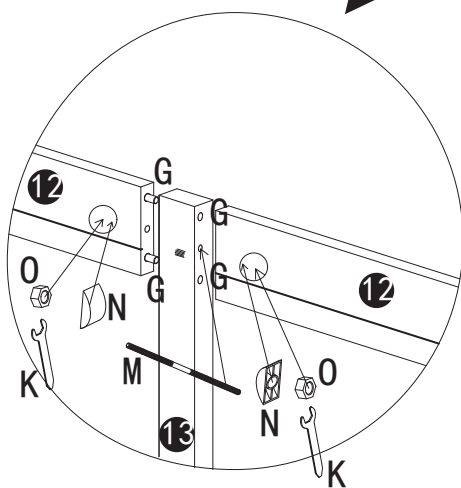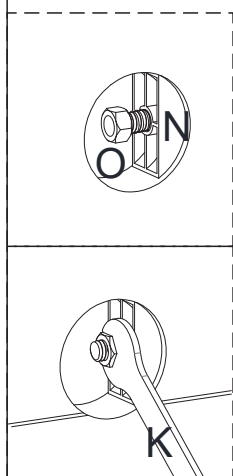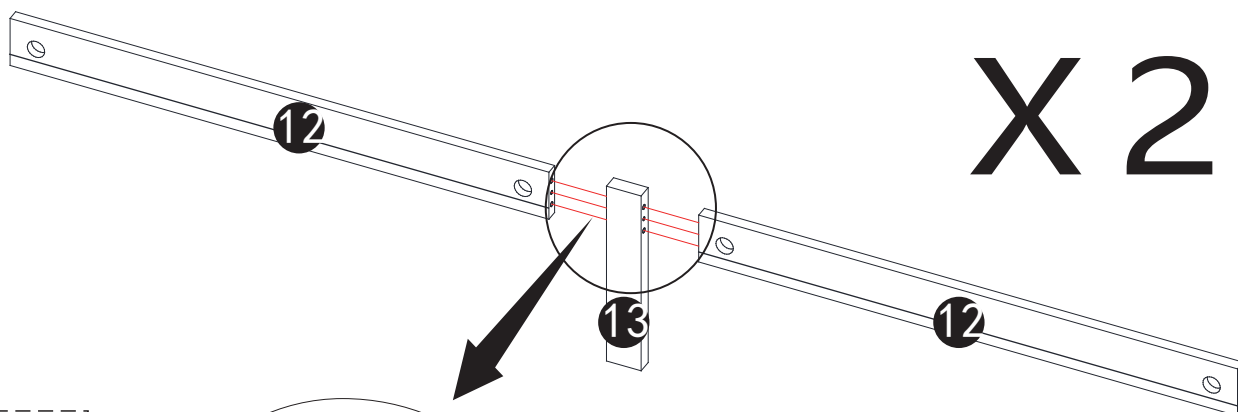


Take note of the difference between the inner and outer sides of board No.13. When fully assembled, the inner side of board No.13 should be flush with No.12 .

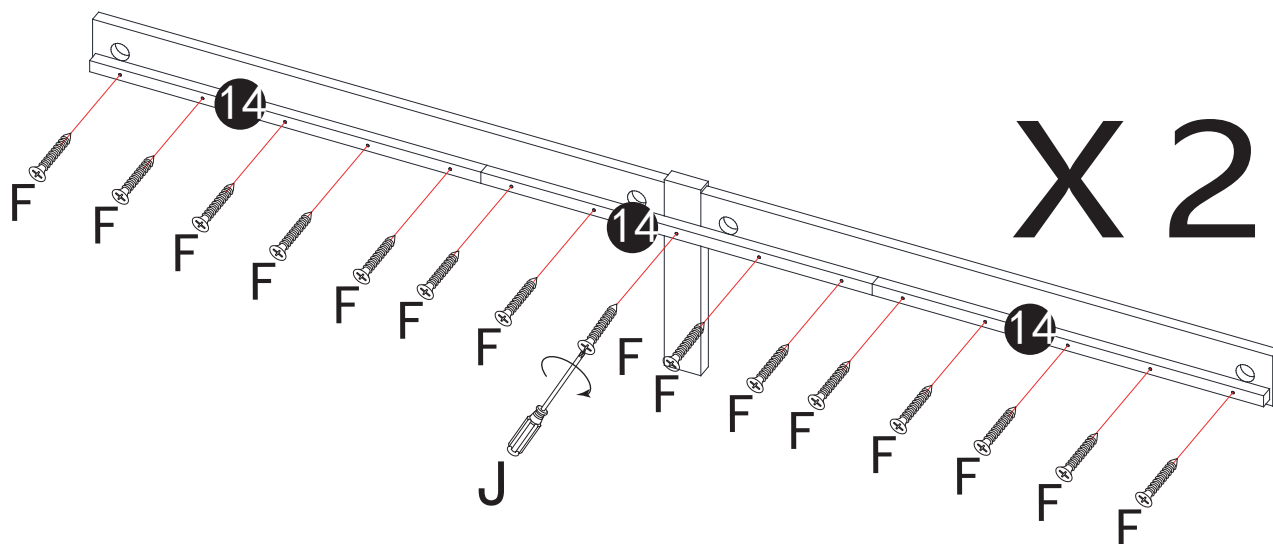





05

G		12	E		4
N		4	K		1
A		8	I		1
O		4			

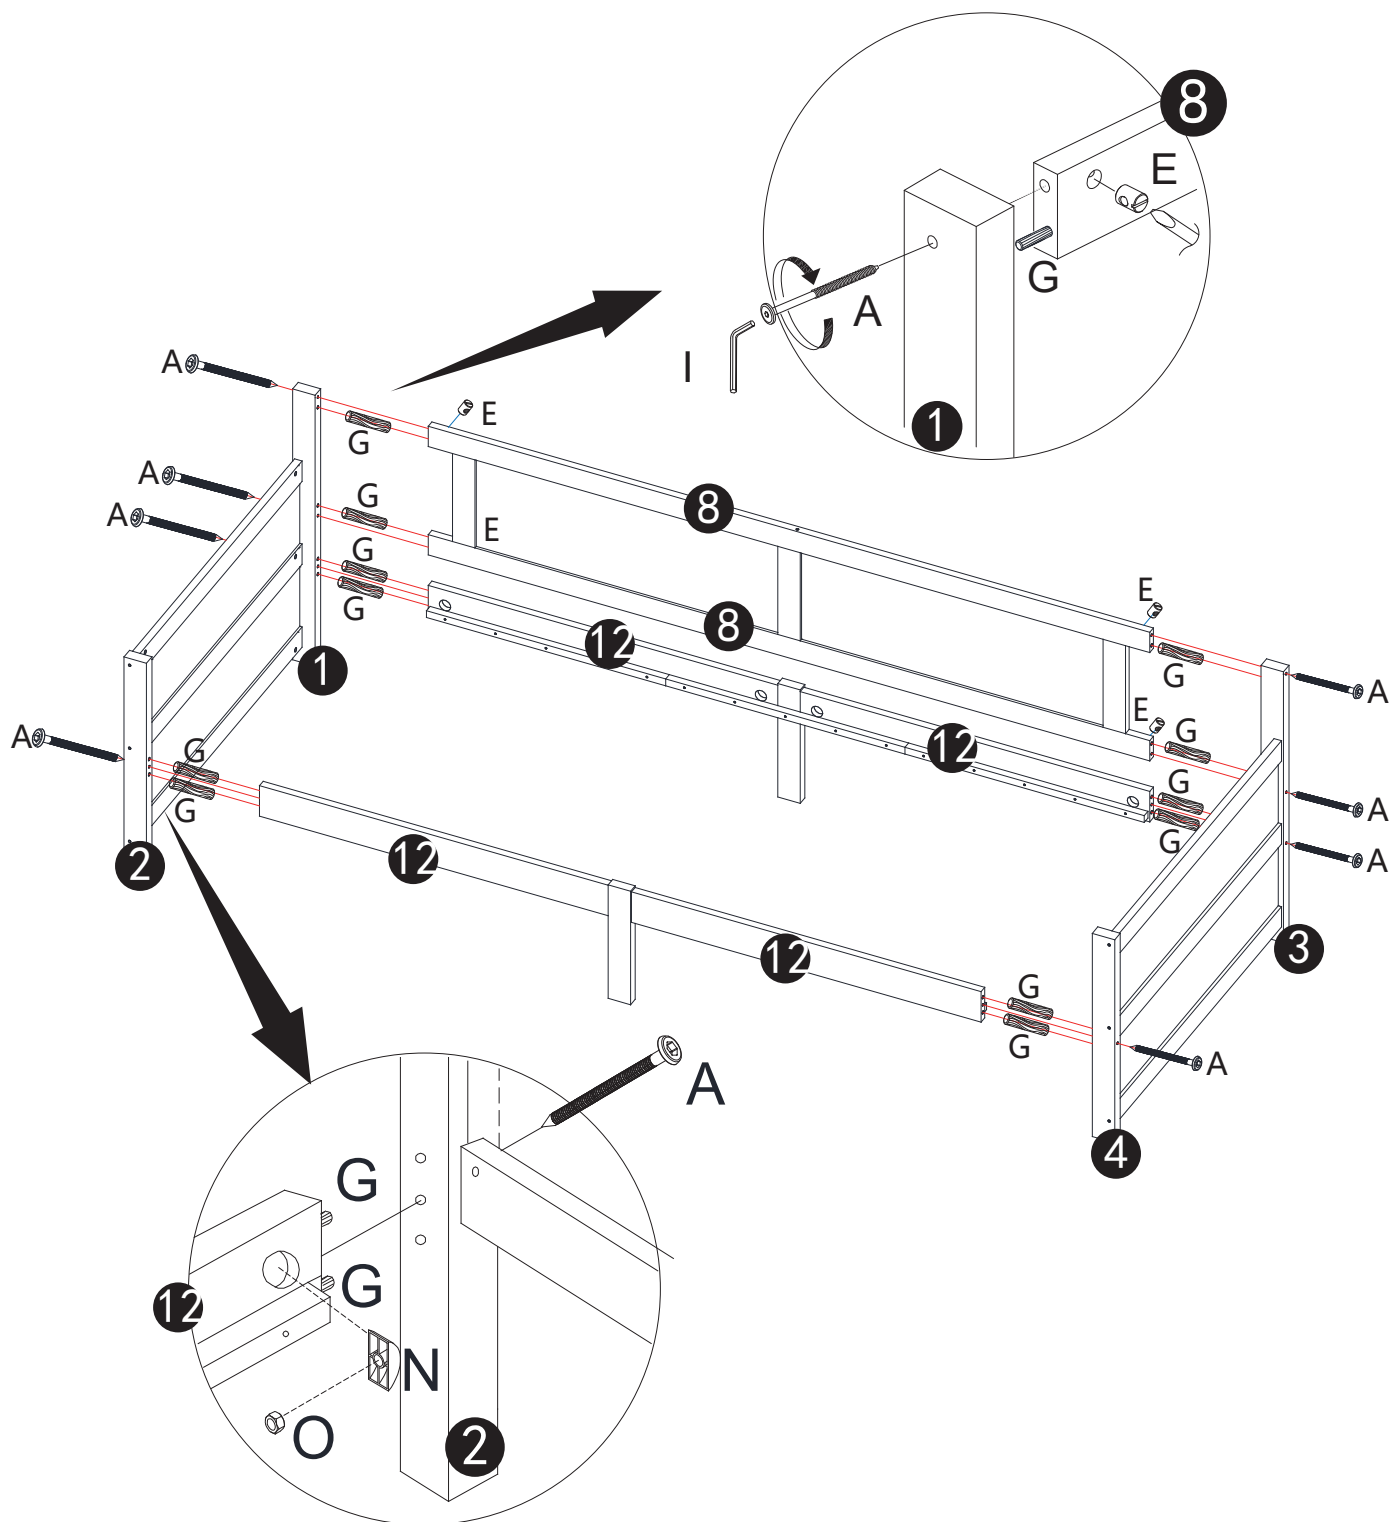


06

F		30
J		1

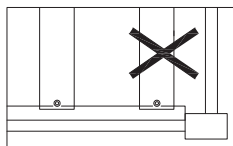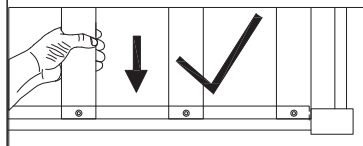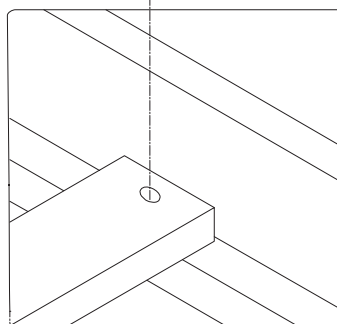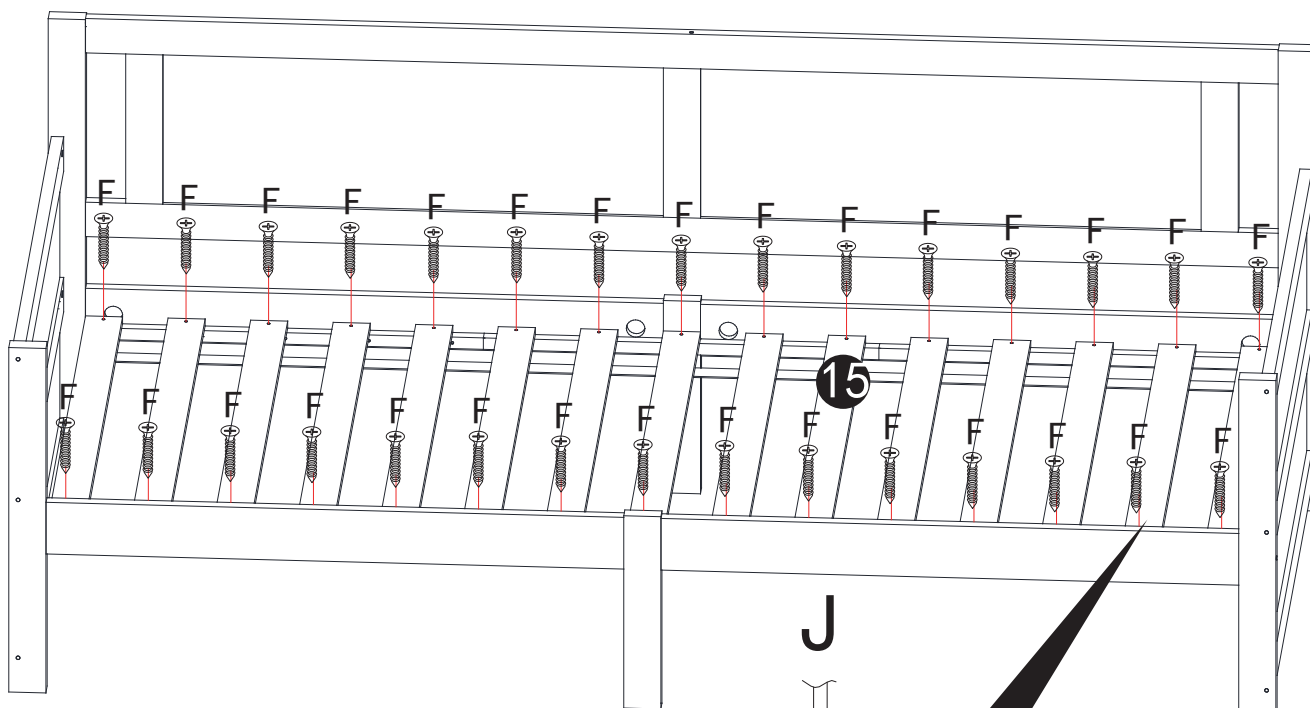

07

G		4	D		12
F		8	P		16
C		12	J		1
L		8			

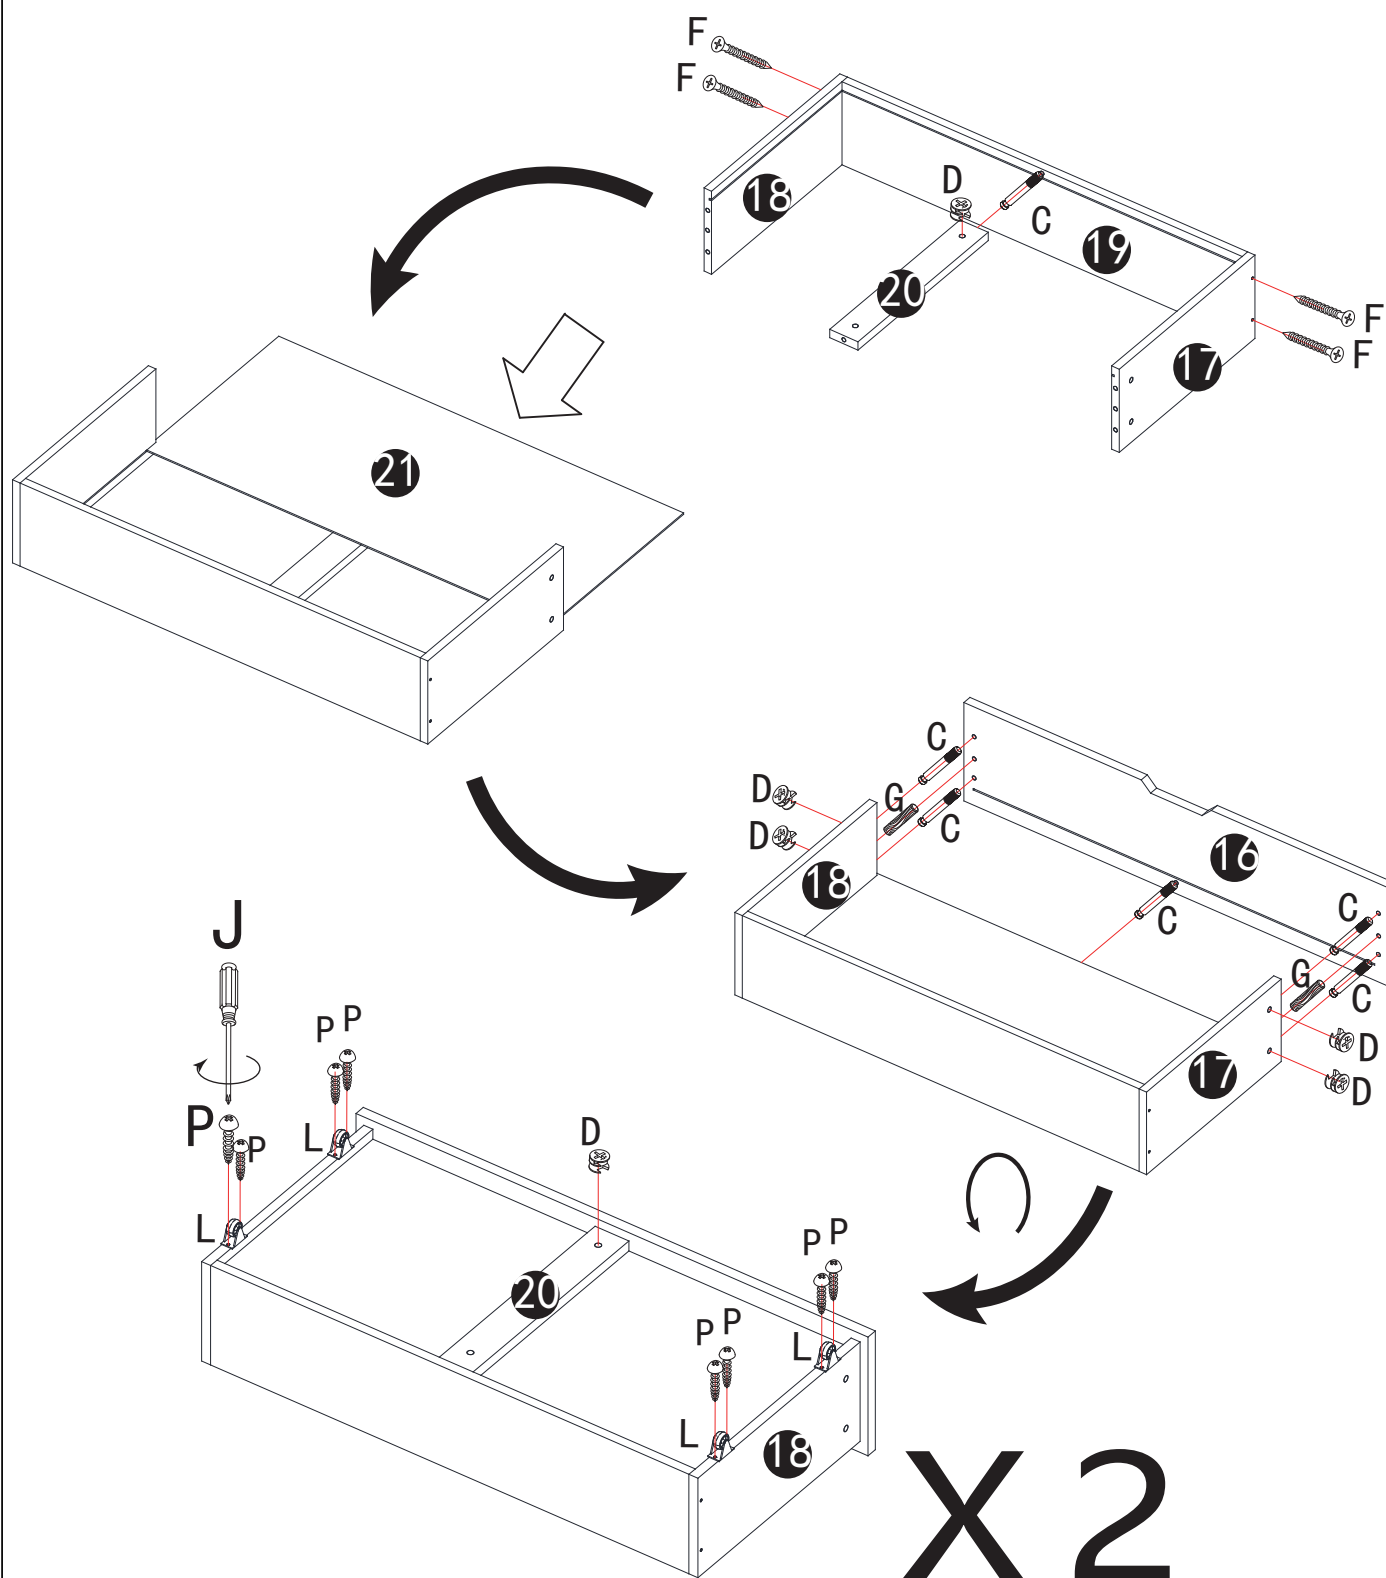

08

